www.DEWALT.com

DWE74911

Dansk *(oversat fra original brugsvejledning)* 4

Deutsch *(übersetzt von den originalanweisungen)* 8

English ***(original instructions)*** 12

Español *(traducido de las instrucciones originales)* 16

Français *(traduction de la notice d'instructions originale)* 20

Italiano *(tradotto dalle istruzioni originali)* 24

Nederlands *(vertaald vanuit de originele instructies)* 28

Norsk *(oversatt fra de originale instruksjonene)* 32

Português *(traduzido das instruções originais)* 36

Suomi *(käännetty alkuperäisestä käyttöohjeesta)* 40

Svenska *(översatt från de ursprungliga instruktionerna)* 44

Türkçe *(orijinal talimatlardan çevrilmiştir)* 48

Ελληνικά *(μετάφραση από τις πρωτότυπες οδηγίες)* 52

Copyright DEWALT

Fig. A

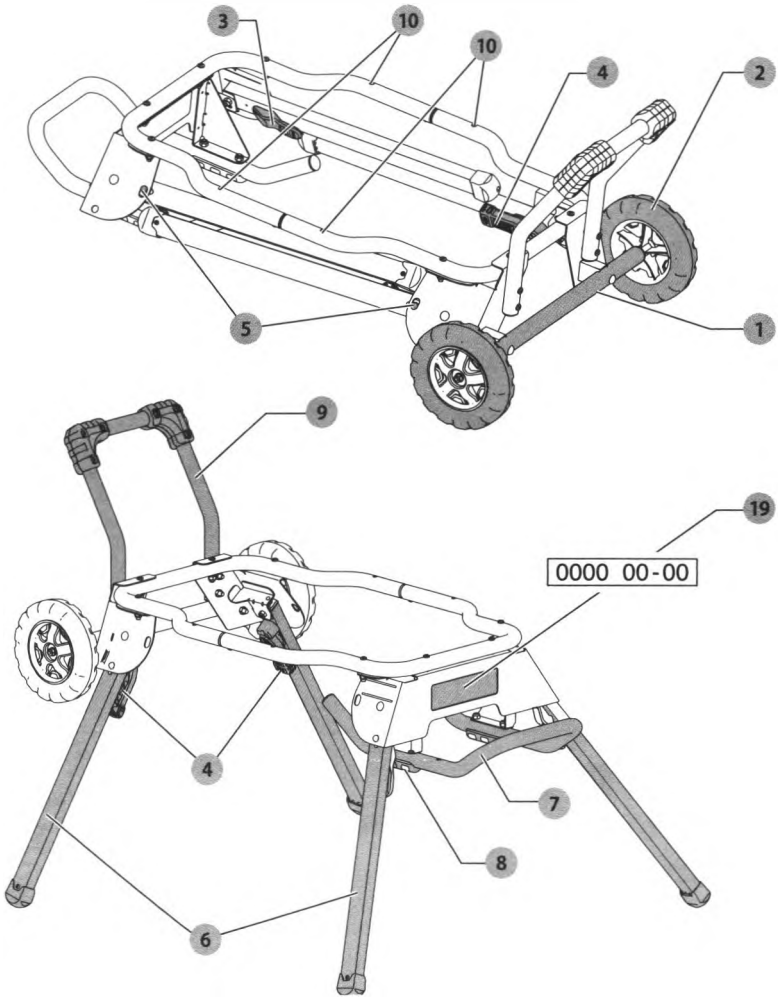

Fig. B

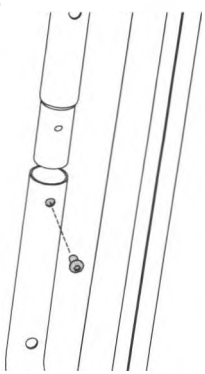

Fig. C

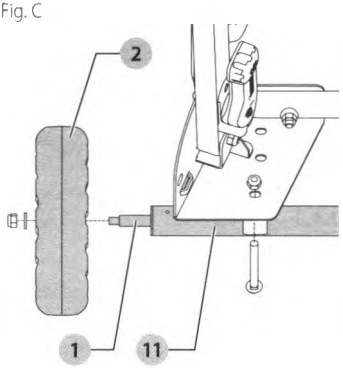

Fig. D

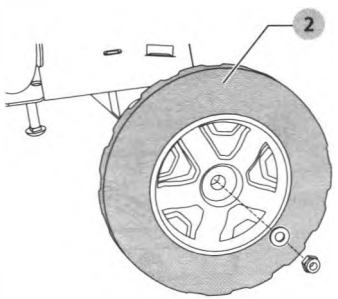

Fig. E

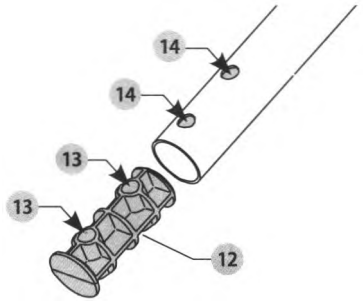

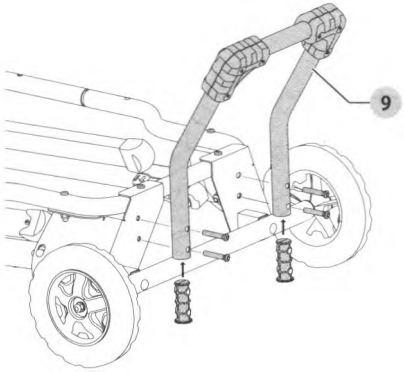

Fig. F

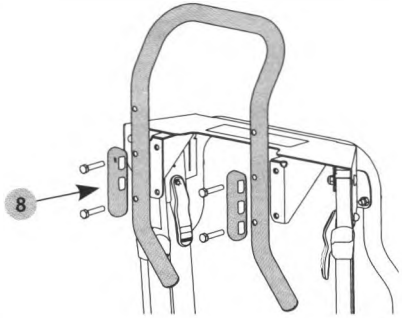

Fig. G

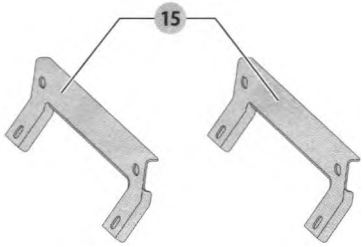

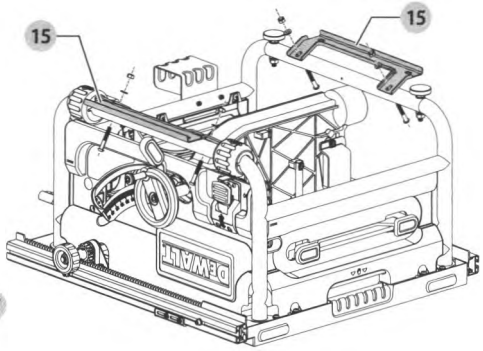

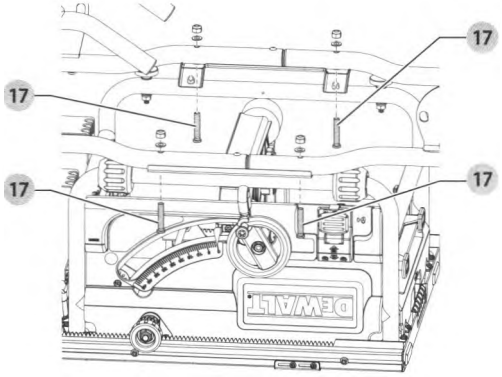

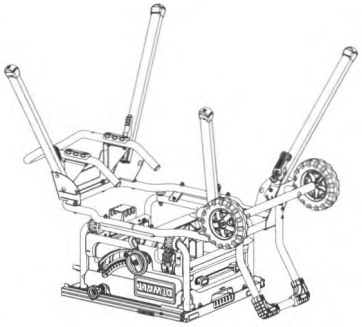

Fig. H

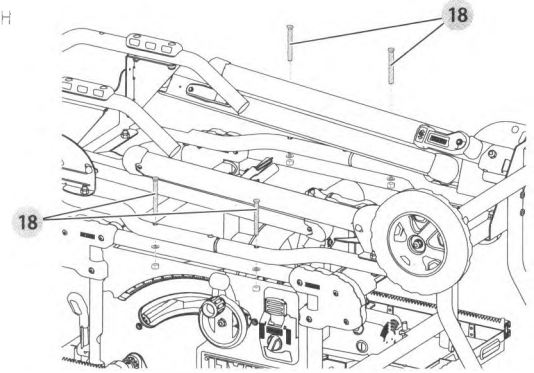

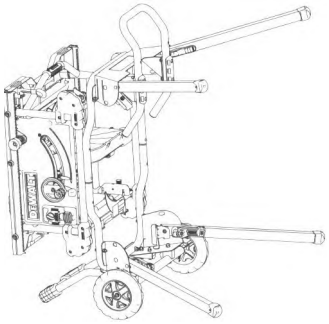

Fig. I

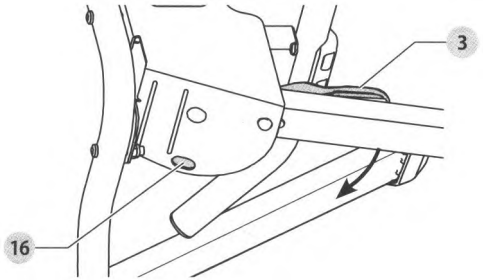

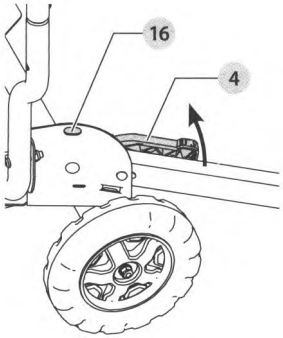

HEAVY-DUTY ROLLING TABLE SAW STAND DWE74911

Congratulations!

You have chosen a DEWALT tool. Years of experience, thorough product development and innovation make DEWALT one of the most reliable partners for professional power tool users.

Technical Data

		DWE74911
Maximum working load	kg	68
Width (Extended)	mm	1020
Width (Folded)	mm	650
Height (Extended)	mm	905
Height (Folded)	mm	514
Weight	kg	15

Definitions: Safety Guidelines

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.

DANGER: *Indicates an imminently hazardous situation which, if not avoided,* ***will*** *result in* ***death or serious injury***

WARNING: *Indicates a potentially hazardous situation which, if not avoided,* ***could*** *result in* ***death or serious injury***

CAUTION: *Indicates a potentially hazardous situation which, if not avoided,* ***may*** *result in* ***minor or moderate injury***

NOTICE: *Indicates a practice* ***not related to personal injury*** *which, if not avoided,* ***may*** *result in* ***property damage***

Denotes risk of electric shock.

Denotes risk of fire.

General Safety Warnings

WARNING: Read all safety warnings and all instructions enclosed with the saw stand and the power tool to be mounted. *Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

General Safety Instructions for Table Saw Accessories

WARNING: To reduce the risk of personal injury:

- ***Follow the mounting instructions carefully. Fasten the saw to the stand securely as instructed.*** *Proper assembly is important to prevent the risk of a collapse of the saw stand.*
- ***Ensure all stand fasteners are securely fastened and that all stand mechanisms are in proper working order before mounting or operating the table saw.*** *Proper assembly is important to prevent the risk of a collapse of the saw stand.*
- ***Attach the power tool securely to the saw stand before using it.*** *Sliding off of the power tool on the saw stand can lead to loss of control.*
- ***DO NOT use the stand on uneven surfaces. DO NOT use the stand with the legs folded and stand sitting on the ground. The stand is designed to be used on a flat, stable surface.*** *If the saw stand can slide around or wobbles, the power tool or the workpiece cannot be evenly and securely guided.*
- ***Pull the plug from the mains receptacle and/or remove the battery from the power tool before making adjustments on the tool or changing tool accessories.*** *Unintentional switching on of the power tool is the cause of many accidents.*
- ***Ensure that long and heavy workpieces do not affect the balance of the saw stand.*** *Long and/or heavy workpieces must be supported at the free end.*
- ***Keep your fingers clear of the hinge points while folding the legs of the saw stand.*** *Danger of fingers being crushed or contused.*
- *Ensure all stand fasteners are securely fastened and that all stand mechanisms are in proper working order before operating the table saw.*
- *Follow the mounting instructions carefully. Fasten the saw to the stand securely as instructed.*
- ***DO NOT*** *modify or use stand for operations for which it is unintended.*
- ***DO NOT*** *use the stand on uneven surfaces.* ***DO NOT*** *use the stand with the legs folded and stand sitting on the ground. The stand is designed to be used on a flat, stable surface.*

Package Contents

The package contains:

1 Stand, right side
1 Stand, left side
2 Wheels
1 Rear axle
1 Kickstand assembly
2 Tube plugs
1 Handle assembly
2 Handle feet
2 Carriage head bolts
2 M6 Pan head bolts

8 M8 Hex head bolts
12 M8 Lock nuts
2 Flat washers
1 Hex key wrench
1 Open end wrench

DWE7491 and DWE7492 saw mounting hardware:
M8x75 Pan head bolts (4)
M8 Lock nuts (4)
M8 Flat washers (4)

DW745/DCS7485 saw mounting hardware:
Adapter brackets (front and rear) (2)
M6 Pan head bolts (4)
M6 Flat washers (4)
M6 Lock nuts (4)
M8 Pan head bolts (4)
M8 Flat washers (4)
M8 Lock nuts (4)

1 Instruction manual

- *Check for damage to the tool, parts or accessories which may have occurred during transport.*
- *Take the time to thoroughly read and understand this manual prior to operation.*

Markings on Tool

The following pictograms are shown on the tool:

Read instruction manual before use.

DO NOT exceed the weight this stand can hold. The DWE74911 table saw stand is designed to support 68 kg safely in a work environment.

DO NOT climb, sit or stand on the stand.

DO NOT drop heavy loads on the table.

Date Code Position (Fig. A)

The date code **19**, which also includes the year of manufacture, is printed into the housing.

Example:

2018 XX XX
Year of Manufacture

Description (Fig. A)

WARNING: *Never modify the power tool or any part of it. Damage or personal injury could result.*

1 Axle
2 Wheels
3 Handle-side leg release levers
4 Wheel-side leg release levers
5 Locking pins
6 Legs
7 Handle
8 Handle feet
9 Kickstand
10 Saw mounting holes

Intended Use

This table saw stand is designed for use with these table saws: DW745, DCS7485, DWE7491 and DWE7492. When used with the DW745 and DCS7485 table saws, the adaptor brackets must be mounted to the saw prior to placing the saw on the stand. Do not use this stand with any other tool.

DO NOT use under wet conditions or in the presence of flammable liquids or gases.

DO NOT let children come into contact with the tool. Supervision is required when inexperienced operators use this tool.

- **Young children and the infirm.** This appliance is not intended for use by young children or infirm persons without supervision.
- This product is not intended for use by persons (including children) suffering from diminished physical, sensory or mental abilities; lack of experience, knowledge or skills unless they are supervised by a person responsible for their safety. Children should never be left alone with this product.

ASSEMBLY

Assembling Stand Frame Halves (Fig. B)

1. Slide smaller tube diameter into opposite tube side as shown until holes align.
2. Install M6x12 pan head bolts until tight on both sides.

Attaching the Wheels and Axle (Fig. C, D)

1. Attach the axle **1** to the end bracket **11** by aligning the pre-drilled holes. Secure axle to end bracket using two carriage bolts, washers and lock nuts provided.
2. Place the wheels **2** on the axle **1** and secure with washers and lock nuts as shown. Tighten wheel and axle nuts securely.

Attaching the Kickstand (Fig. E)

Insert the tube plugs **12** into the end of the kickstand tube **9**. Be sure that the holes **13** in the tube plugs are in line with the holes **14** in the kickstand tube before inserting the tube plugs.

Align the kickstand holes with the holes on the end bracket. Be sure the kickstand is pointing up when the stand is in an upright position. Secure the kickstand with the four M8x75 pan head bolts and nuts provided as shown.

Attaching the Handle (Fig. F)

Attach the handle with the four M8x75 hex head bolts provided. Feed the bolts through the handle feet **8** then through the handle tube **7** and through the gusset holes on the end bracket. Install four nuts and tighten securely. **NOTE:** The handle has two positions to choose from: a compact position and an easy carry/setup position.

Table Saw Mounting (Fig. G, H)

WARNING: To reduce the risk of injury, turn unit off, disconnect machine from power source before assembling the table saw to the table saw stand. *An accidental start-up can cause injury.*

WARNING: *For your own safety, read and understand the table saw instruction manual before using. Failure to heed these warnings may result in personal injury and serious damage to the table saw and the accessory.*

Mounting Steps for the DWE7491/DWE7492 Only (Fig. A, H)

1. Place the saw, table side down, on a stable, non-marring surface.
2. Place the stand on top of saw as shown. Align the stand holes **10** with the saw frame holes.
3. Feed the M8x75 pan head bolts **18** through the stand frame then through the saw frame. Secure with an M8 lock nut from top and tighten in each of the four hole locations.
4. Lift assembly by stand handle onto kickstand.

Mounting Steps For The DW745 and DCS7485 Only (Fig. G)

1. Place the saw, table side down, on a stable, non-marring surface.
2. Attach the adaptor brackets **15** to the saw using the M6x40 pan head bolts, M6 washers, and M6 lock nuts as shown in Figure G. Do not tighten fully.
3. Place the stand on top of the saw as shown. Align the stand holes with the holes in the adapters.
4. Feed the M8x45 pan head bolts **17** through the stand then through the adapter hole. Secure with M8 washers and M8 lock nuts.
5. Tighten all fasteners securely.
6. Lift assembly by stand handle onto kickstand.

WARNING: When the adapter brackets are mounted to the power tool, operate it exclusively on the saw stand. *Without the saw stand, the adapter brackets mounted with the power tool, does not stand securely and can tip over.*

WARNING: *To reduce the risk of personal injury, be sure the table saw is fully anchored on the stand.*

WARNING: *To reduce the risk of personal injury, do not hang objects from the handle. The stand may tip when downward force is applied.*

For additional questions or clarification on the above instructions, consult an authorised DEWALT repair agent.

Transporting the Saw on the Stand (Fig. A, I)

Collapsing the Stand for Transport

1. Lifting the stand by the handle, tilt up the stand until the saw is at a 90 degree angle sitting on the kickstand.
2. Fold the handle-side legs by depressing the handle-side leg release levers **3** and rotate until locking pin clicks into the detent **16**. Repeat the operation on the second handle side leg of the stand.
3. Fold the wheel-side legs by rotating the wheel-side leg release levers **4** with foot (or hand) and rotate until locking pin clicks into the detent **16**. Repeat with other wheel leg.

WARNING: That before transportation tool must be disconnected from mains power supply or the battery must be removed.

WARNING: *To reduce the risk of personal injury,* ***DO NOT*** *operate the table saw mounted to the stand with the legs folded and the stand sitting on the ground.*

WARNING: *Be sure the locking pins have engaged and the legs are firmly held in place.*

To Raise Stand from Collapsed Position

Roll the stand to the workspace. Be sure the area is flat and stable before attempting to set up the saw and stand.

1. Tilt up the stand until the saw is at a 90 degree angle sitting on the kickstand.
2. Unfold the handle side legs by depressing leg release levers and rotate until locking pin clicks into the detent. Repeat for other handle side leg.
3. Unfold the wheel side legs by rotating leg release levers and rotate leg until locking pin clicks into the detent. Repeat for other bottom leg.

WARNING: *Be sure that the locking pins have engaged and the legs are firmly held in place.*

4. With all legs locked in their open positions, pull stand handle toward you and tilt over until all four feet are on the ground.

MAINTENANCE

Your DEWALT power tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool care and regular cleaning.

Cleaning

WARNING: *Blow dirt and dust out of the main housing with dry air as often as dirt is seen collecting in and around the air vents. Wear approved eye protection and approved dust mask when performing this procedure.*

WARNING: *Never use solvents or other harsh chemicals for cleaning the non-metallic parts of the tool. These chemicals may weaken the materials used in these parts. Use a cloth dampened only with water and mild soap. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.*

Storage

WARNING: *TIPPING HAZARD. The stand may tip when storing or transporting the stand to the vertical position. Store the stand in the horizontal position to reduce the risk of the stand tipping.*

Optional Accessories

WARNING: *Since accessories, other than those offered by DEWALT, have not been tested with this product, use of such accessories with this tool could be hazardous. To reduce the risk of injury, only DEWALT recommended accessories should be used with this product.*

Consult your dealer for further information on the appropriate accessories.

Protecting the Environment

Separate collection. Products and batteries marked with this symbol must not be disposed of with normal household waste.

Products and batteries contain materials that can be recovered or recycled reducing the demand for raw materials. Please recycle electrical products and batteries according to local provisions. Further information is available at **www.2helpU.com**.

Belgique et Luxembourg Belgïe en Luxemburg	DEWALT - Belgium BVBA Egide Walschaertsstraat 16 2800 Mechelen	Tel: NL Tel: FR Fax:	32 15 47 37 63 32 15 47 37 64 32 15 47 37 99	www.dewalt.be enduser.BE@SBDinc.com
Danmark	DEWALT (Stanley Black&Decker A/S) Roskildevej 22 2620 Albertslund	Tel: Fax:	70 20 15 10 70 22 49 10	www.dewalt.dk kundeservice.dk@sbdinc.com
Deutschland	DEWALT Richard Klinger Str. 11 65510 Idstein	Tel: Fax:	06126-21-0 06126-21-2770	www.dewalt.de infodwge@sbdinc.com
Ελλας	DEWALT (Ελλάς) A.E. ΕΔΡΑ-ΓΡΑΦΕΙΑ : Στραβωνος 7 & Α. Βουλιαγμενης, Πυφαδα 166 74, Αθηνα SERVICE : Ημερος Τοπος 2 (Χαν Αδαμ) – 193 00 Ασπροπυργος	Τηλ: Φαξ:	00302108981616 00302108983570	www.dewalt.gr Greece.Service@sbdinc.com
España	DEWALT Iberica, S.C.A Parc de Negocios "Mas Blau" Edificio Muntadas, c/Bergada, 1, Of. A6 08820 El Prat de Llobregat (Barcelona)	Tel: Fax:	934 797 400 934 797 419	www.dewalt.es respuesta.postventa@sbdinc.com
France	DEWALT 5, allee des Hetres BP 60105, 69579 Limonest Cedex	Tel: Fax:	04 72 20 39 20 04 72 20 39 00	www.dewalt.fr scufr@sbdinc.com
Schweiz Suisse Svizzera	DEWALT In der Luberzen 42 8902 Urdorf	Tel: Fax:	044 - 755 60 70 044 - 730 70 67	www.dewalt.ch service@rofoag.ch
Ireland	DEWALT Building 4500, Kinsale Road Cork Airport Business Park Cork, Ireland	Tel: Fax:	00353-2781800 01278 1811	www.dewalt.ie Sales.ireland@sbdinc.com
Italia	DEWALT via Energypark 6 20871 Vimercate (MB), IT	Tel: Fax.	800-014353 39 039-9590200 39 039-9590311	www.dewalt.it
Nederlands	DEWALT Netherlands BVPostbus 83, 6120 AB BORN	Tel: Fax:	31 164 283 063 31 164 283 200	www.dewalt.nl
Norge	DEWALT Postboks 4613 0405 Oslo, Norge	Tel: Fax:	45 25 13 00 45 25 08 00	www.dewalt.no kundeservice.no@sbdinc.com
Österreich	DEWALT Werkzeug Vertriebsges m.b.H Oberlaaerstrasse 248, A-1230 Wien	Tel: Fax:	01 - 66116 - 0 01 - 66116 - 614	www.dewalt.at service.austria@sbdinc.com
Portugal	DEWALT Ed. D Dinis, Quina da Fonte Rua dos Malhoes 2 2A 2º Esq. Oeiras e S. Julião da Barra, paço de Arcos e Caxias 2770 071 Paço de Arcos	Tel: Fax:	+351 214667500 +351214667580	www.dewalt.pt resposta.posvenda@sbdinc.com
Suomi	DEWALT PL47 00521 Helsinki, Suomi	Puh: Faksi:	010 400 4333 0800 411 340	www.dewalt.fi asiakaspalvelu.fi@sbdinc.com
Sverige	DEWALT BOX 94 43122 Mölndal Sverige	Tel: Fax:	031 68 61 60 031 68 60 08	www.dewalt.se kundservice.se@sbdinc.com
Turkiye	Sanayi ve Ticareet Bakanlıgı tebligince kullanim omni 7 yıldır. Stanley Black & Decker Turkey Alet Uretim San. Tic. Ltd.Şti. Kozyatagi Mh Degirmen Sk. Nida Kule No: 18 Kat: 6, 34742 Kadıkoy, Istanbul, Turkiye	Tel: Faks:	+90 216 665 2900 +90 216 665 2901	www.dewalt.com.tr info-tr@sbdinc.com
United Kingdom	DEWALT, 210 Bath Road; Slough, Berks SL1 3YD	Tel: Fax:	01753-567055 01753-572112	www.dewalt.co.uk emeaservice@sbdinc.com
Australia	DEWALT 810 Whitehorse Road Box Hill VIC 3128 Australia	Tel: Aust Tel: NZ	1800 338 002 0800 339 258	www.dewalt.com.au www.dewalt.co.nz
Middle East Africa	DEWALT P.O. Box - 17164, Jebel Ali Free Zone (South), Dubai, UAE	Tel: Fax:	971 4 812 7400 971 4 2822765	www.dewalt.ae Service.MEA@sbdinc.com